



REMOVAL !'K ? 'Cj Yf\ YUX'Wtbgc`Y

1. Disconnect and isolate the battery negative cable.
2. Pull downward on the sides of the overhead console housing firmly and evenly to disengage the snap clips from the overhead console bracket.

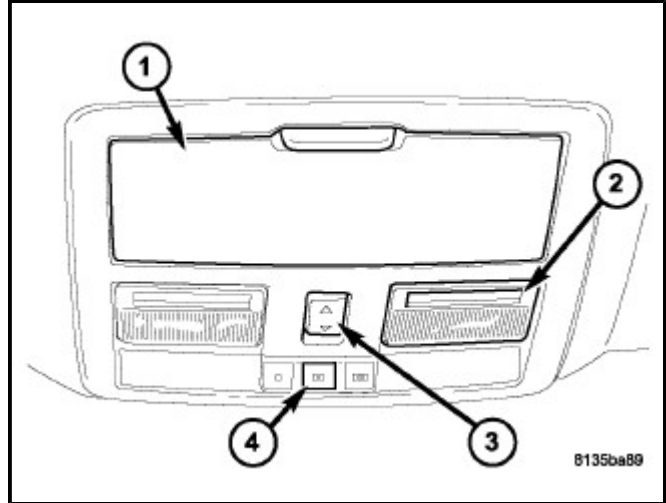

3. Lower the overhead console from the headliner far enough to access the wire harness connectors (2).
4. Disconnect the roof wire harness connectors (2) from the overhead console wire harness connector.
5. Remove the overhead console from the headliner.

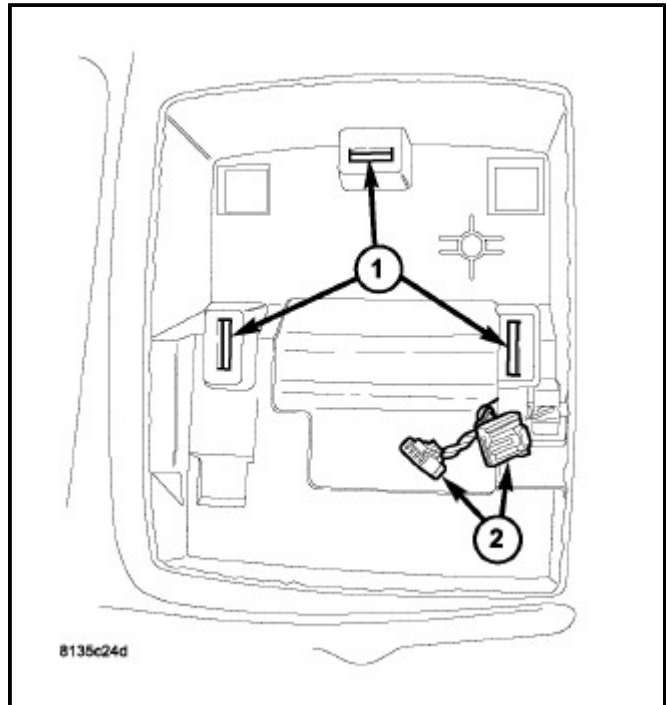

INSTALLATION - WK overhead console

1. Position the overhead console near the mounting location on the headliner.
2. Reconnect the roof wire harness connectors (2) to the overhead console.
3. Align the snap clips on the overhead console housing with their receptacles (1) in the overhead console bracket.
4. Push upward firmly and evenly on the sides of the overhead console housing over the snap clip locations until the snap clip is fully engaged with its receptacle in the overhead console bracket.
5. Reconnect the battery negative cable.

